


QUICK REFERENCE

Change PC IP

1. Press the Settings button to enter the Scanner Menu.



2. Select Wireless Settings.

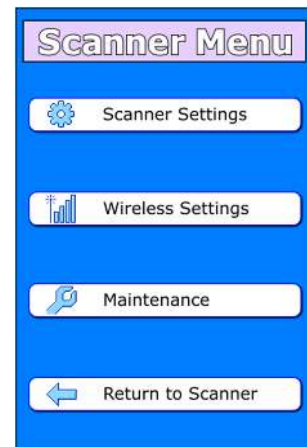

3. Click in the "PC Server IP:" textbox, and change the IP address.
4. Press Save.
5. Press Return to Scanner.

